


### **Pressostato - Pressure switch - Pressostat**

Codice Code Code	Pressione Pressure Pression (bar)	Fase Phase Phasé
PRITCPM5	1 ÷ 5	Mono - Single - Mono
PRITCPM12	3 ÷ 12	Mono - Single - Mono



### **Tube flessibile MF - Flexible piping MF - Tube Flexible**

Codice Code Code	Lunghezza Length Longeur (mm)	Raccordo da Connection Raccordement (Inch)
FMFG0150	500	1?
FMFG0160	600	1?
FMFG0180	800	1?
FMFG01N1	1000	1?

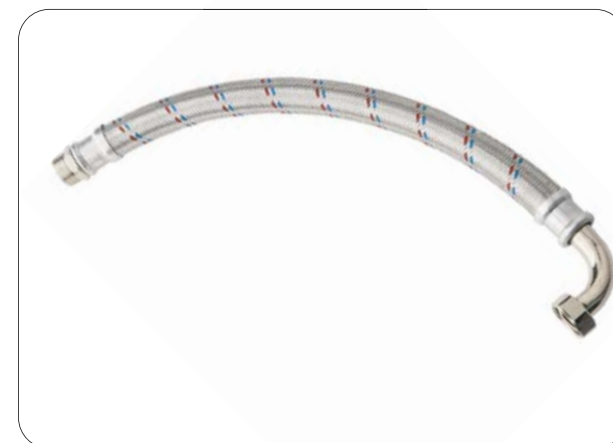

### **Manometro - Manometer - Manometre**

Codice Code Code	Diametro Diameter Diamètre (mm)	Pressione Pressure Pression (bar)	Tipo Type Type
MNAR5206	50	0 ÷ 6	Radiale
MNAR5212	50	0 ÷ 12	Radiale
MNAP5206	50	0 ÷ 6	Assiale
MNAP5212	50	0 ÷ 12	Assiale

